


180M Locking Cap

Installation & Maintenance Instructions

The 180M Locking cap incorporates a patented spinning technology when in the locked position; the cap will free spin, making it impossible to remove. To remove the cap, simply use the included key and unlock the cap.

The following should have been included in your package:

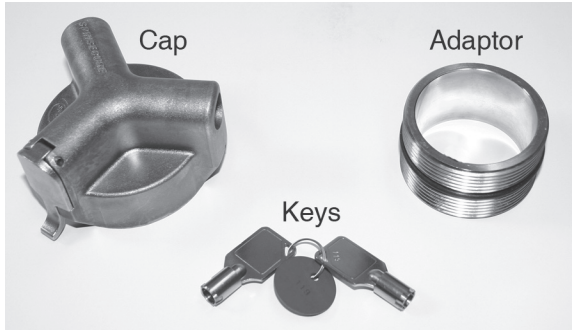

To Use on Male Threaded Fitting

NOTE: 35PSI Maximum Pressure

1. Discard adaptor and screw cap directly onto male threaded pipe fitting.
2. Make sure cap is tight on male pipe threads.
3. Turn key so the slot in the lock roller is in the up (12:00) position. Cap should spin freely without threading off pipe. Turn key to other position to unlock allowing cap to thread off.

To Use on Female Threaded Fitting

NOTE: 35PSI Maximum Pressure

1. Apply semi-permanent thread sealant, like Loctite 567, to the threads on the short side of the adaptor.
2. Use a strap wrench, with a nylon strap, to screw the adaptor into the female threaded fitting. The short side of the adaptor, with the sealant, should go into the fitting.
3. Thread cap onto adaptor.
4. Turn key so the slot in the lock roller is in the up (12:00) position. Cap should spin freely without threading out of pipe fitting. Turn key to other position to unlock allowing cap to thread out.